


AB54 2.4GHz Point-To-Point Bridge

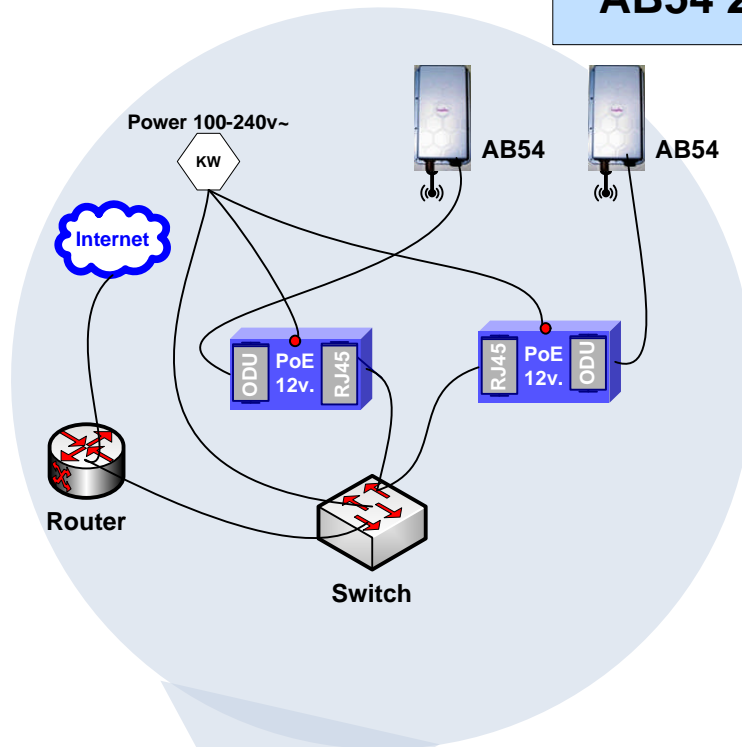

Wireless Bridge

- System Status
 - ◆ System Summary
 - ◆ WDS Link Status
- System Configuration
 - ◆ System Properties
 - ◆ IP Settings
 - ◆ Wireless Network
 - ◆ WDS Link Settings
 - ◆ WDS Security Settings
 - ◆ Wireless Advanced Settings
- Management
 - ◆ Administration <
 - ◆ SNMP -->
 - ◆ Backup/Restore Settings
 - ◆ Firmware Upgrade
 - ◆ Reboot

Basic Bridge Configuration	
Select "Wireless Bridge"	
Set "SSID and Channel"	
Set "Mac Address" of another Bridge	
Set security: WPA-PSK (TKIP, AES)	
Set "Distance" and other settings	

